


Fuji Frontier C8 & PrintPix NC-1000

The Fuji C8/NC-1000 interface allows the APM or Lab 50 software to convert orders generated from an APM into a format a Fuji Frontier/ PrintPix NC-1000 machine can accept and print. The machine must be running in C8 mode to accept Fuji C8 orders.

Prerequisites

1. The APM and/or Lab 50 must be able to see the Fuji Frontier across the local area network and vice versa.
2. **Fuji C8:** The machine running the Fuji C8 software must be properly configured and running. (Please refer to Fuji documentation for setup.)
3. **PrintPix NC-1000:** The machine must be running the NC-1000 Print Pix Utility and the Windows driver must be loaded onto the system.
4. If Lab 50 is not present in the local installation, then at least one or more fulfillments must be enabled to print to a local printer connected to the APM. This is seen in the screenshot below, taken from the main options of an enabled fulfillment in the Setup Wizard.

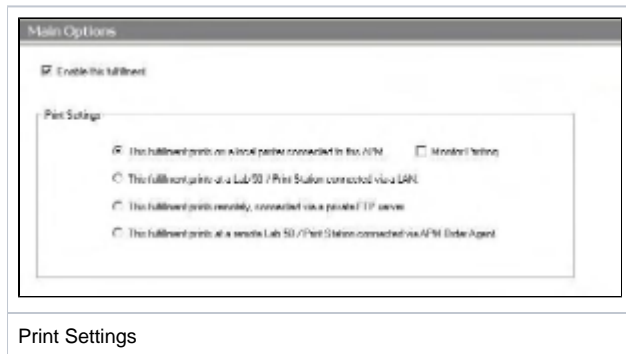

Setting up the Fuji C8 & PrintPix NC-1000 Using the Setup Wizard

The Setup Wizard is used to configure the APM to print to the Fuji C8 Interface.

This process includes the following steps:

1. Adding the printer interface and editing the general settings.
2. Product setup from within the interface.
3. Assigning printable products to the interface.