

APM 1200 (CD Drive & Card Reader Replacement)

Step 1 - Open the Case:

- Start by taking out the screws from the rear casing. There are four on top and one on each side.



- There is a fifth screw located behind the monitor and underneath the receipt panel, make sure to unscrew that as well.



- Once the casing is unscrewed, remove the casing from the hardware.



- Remove the cover plate.



- Unscrew the side-mounted screws from the front panel.



- Pull to remove the front panel.



Step 2 – Remove/Replace the Card Reader and/or CD Drive:

- Take the screws out of the card reader bracket.



- Unplug the IDE cable and power supplies connected to the CD/DVD drive.



- Unplug the PCMCIA SCSI cable from the SCSI card.



- Unplug the USB connected to the inside of the card reader. The card reader should slide out of the front of the unit.



- To replace the CD/DVD drive, get a small screwdriver and unscrew it from the bracket.



- Slide the CD/DVD drive forward.



- To replace the card reader, unscrew the large screws from the bracket.



- The card reader should slide forward.

